

## Service-Sink Faucet Model: 830-AA




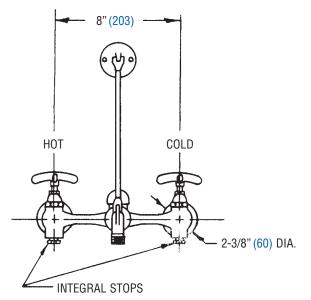

**FRONT VIEW** 

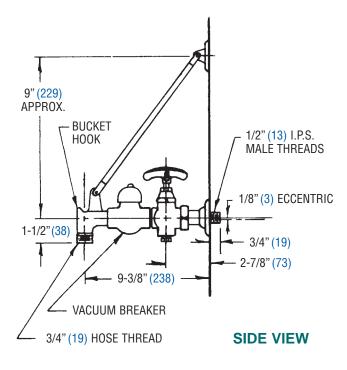

**NOTE:** These roughing measurements may vary 1/4" (plus or minus).

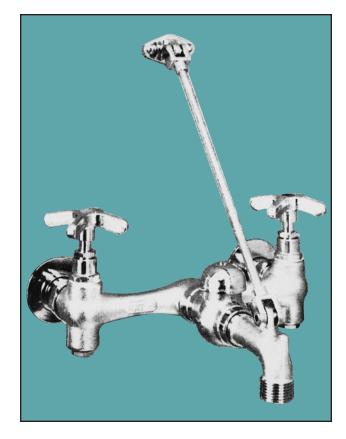

General:

830-AA Service Faucet - Chrome plated with vacuum breaker, integral stops, adjustable wall brace, pail hook and <sup>3</sup>/<sub>4</sub>" hose thread on spout. Body inlets 8" center to center, four arm handles. Valves contain renewable hub, renewable seats, swivel discs, encased washers and brass washer screws.

Material: Finish:

Commercial red brass alloy casting-rough finish.

Chrome plating exceeding requirements of ANSI/ASTM B-456-71. Indicators cold (blue) and hot (red) are included.


Specifications and Codes:

In the U.S.A., meets or exceeds requirements of ANSI-A112.18.1M-1979 for "Finished and Rough Brass Plumbing Fixture Fittings." In Canada, meets or exceeds the requirements of CSA standards B125 - "Plumbing Fittings," B64.1.1 - "Vacuum Breakers - Atmosphere Type" and B64.0 - "General Requirements for Backflow Preventers and Vacuum Breakers," and is approved under Product Class No. 6811 01 under Report #LM57412-1. Conforms to ASSE 1001.



## 830-AA Group Replacement F **Assembly Parts List**



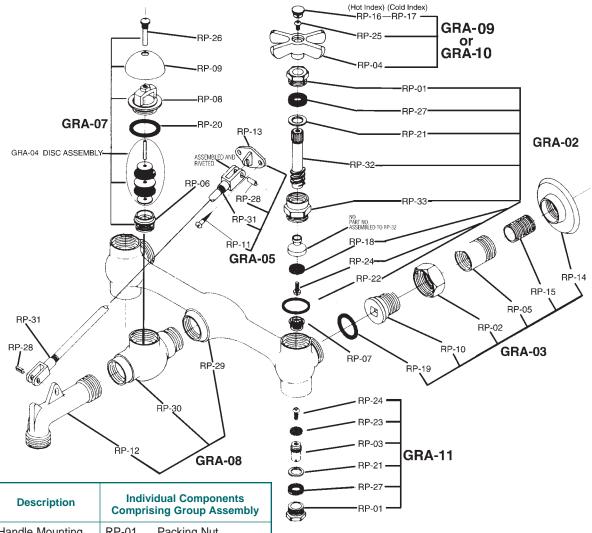

Group Assembly Part #	Description	Individual Components Comprising Group Assembly	
GRA-02	Handle Mounting Group Assembly	RP-01 RP-27 RP-21 RP-32 RP-33 RP-18 RP-24 RP-22	Packing Nut Packing Brass Washer Spindle Handle Hub Seat Washer Seat Washer Screw Hub Washer
GRA-03	Coupling Assembly	RP-14 RP-15 RP-05 RP-02 RP-10 RP-19	Wall Flange Nipple Bushing (socket) Coupling Nut Swivel Washer
GRA-05	Brace Assembly	RP-31	Brace Flange S.S. Roll Pin Wall Brace Rod Wood Screw
GRA-07	Vacuum Breaker & Disc Assembly	RP-26 RP-09 RP-08 RP-20 RP-06 GRA-04	V.B. Cap Screw Cap V.B Hub V.B Hub Washer Seat Vacuum Breaker Disc Assembly

Group Assembly Part #	Description	Individual Components Comprising Group Assembly	
GRA-08	Complete Body Assembly	RP-29 RP-30 RP-12	Center Body V.B. Body Nozzle
GRA-09	Handle Assembly (Cold)	RP-17 RP-25 RP-04	Cold Index Handle Screw Handle
GRA-10	Handle Assembly (Hot)	RP-16 RP-25 RP-04	Hot Index Handle Screw Handle
GRA-11	Integral Stop Assembly	RP-24 RP-23 RP-03 RP-21 RP-27 RP-01	Seat Washer Screw Washer Spindle Brass Washer Packing Packing Nut
RP-07	(2 per package)	RP-07	Seat